

N-ANN-S/PG

Serial/Parallel Printer Interface Module



Miscellaneous

General

The N-ANN-S/PG Interface module connects either a serial or parallel printer with a compatible Fire Alarm Control Panel (FACP) to print real-time logs of system events, detector status reports, and event histories.

The N-ANN-S/PG and the FACP communicate over a two-wire serial interface employing the ANN-BUS communication format. An additional two wires are used for 24-volt DC power. A single four-conductor unshielded cable may be used for both power and data communications.

Up to eight N-ANN-S/PGs may be connected to the ANN-Bus of each FACP.

Features

- Auto-configure menu selection allows programmer to bring all the devices attached to the ANN-BUS on-line quickly.
- Surface mounts directly to wall.
- Can be remotely located up to 6,000 feet (1,829 m) from the panel.
- May be powered by 24 VDC from the host FACP or by remote power supply (requires 24 VDC).
- Connects a remote printer using a standard cable (DB-9 for a serial printer; DB-25 for a parallel printer).


Specifications

- Operating Voltage: 24 VDC
- Current (Alarm and Standby): 45mA
- Ambient Temperature: 32°F to 120°F (0°C to 49°C)
- Relative Humidity: 93% ± 2% RH (noncondensing) at 32°C ± 2°C (90°F ± 3°F)
- Maximum wiring distance from FACP: 6,000 ft. (1,829 m.)
- Dimensions: 6.00" (15.2 cm.) high x 7.76" (19.7 cm.) wide x 1.46" (3.7 cm.) deep
- For use indoors in a dry location
- Connections to FACP are power-limited and supervised.

Agency Listings and Approvals

The listings and approvals below apply to the N-ANN-S/PG. In some cases, certain modules may not be listed by certain approval agencies, or listing may be in process. Consult factory for latest listing status.

- **UL:** S635
- **CSFM:** 7120-0028:242
- **MEA:** 442-06-E Vol.2

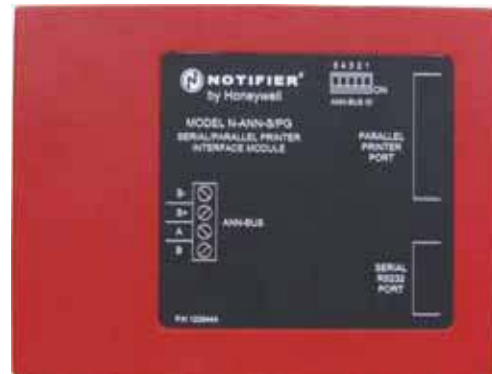

7103cov.jpg

The ANN-BUS

POWERING THE DEVICES ON THE ANN-BUS FROM AUXILIARY POWER SUPPLY

ANN-BUS devices can be powered by an auxiliary power supply when available panel power is exceeded. See FACP manual for information.


ANN-BUS DEVICE ADDRESSING

Each ANN-BUS device requires a unique address (ID Number) in order to communicate with the FACP. A maximum of eight devices can be connected to the FACP ANN-BUS communication circuit. See the FACP manual for more information.

WIRE REQUIREMENTS

The N-ANN-S/PG connects to the FACP ANN-BUS communications circuit. To determine the type of wire and the maximum wiring distance, calculate the total worst case current draw for all modules on a single 4-conductor bus. Use the following table to determine the maximum distance the modules can be located from the FACP. In general, the wire length is limited by resistance, but for heavier wire gauges, capacitance is the limiting factor. These cases are marked in the chart with an asterisk (*). Maximum length can never be more than 6,000 feet (1,829 m), regardless of gauge used.

Communication Pair Wiring Distance: FACP to last ANN-BUS Module				
Total Worst Case Current Draw (amps)	22 Gauge	18 Gauge	16 Gauge	14 Gauge
0.100	1,852 ft. (565 m)	4,688 ft. (1,429 m)	* 6,000 ft. (1,829 m)	* 6,000 ft. (1,829 m)
0.200	926 ft. (282 m)	2,344 ft. (715 m)	3,731 ft. (1,137 m)	5,906 ft. (1,800 m)
0.300	617 ft. (188 m)	1,563 ft. (476 m)	2,488 ft. (758 m)	3,937 ft. (1,200 m)
0.400	463 ft. (141 m)	1,172 ft. (357m)	1,866 ft. (569 m)	2,953 ft. (900 m)
0.500	370 ft. (113 m)	938 ft. (286 m)	1,493 ft. (455 m)	2,362 ft. (720 m)
0.600	309 ft. (94 m)	781 ft. (238 m)	1,244 ft. (379 m)	1,969 ft. (600 m)
0.700	265 ft. (81 m)	670 ft. (204 m)	1,066 ft. (325 m)	1,687 ft. (514 m)
0.800	231 ft. (70 m)	586 ft. (179 m)	933 ft. (284 m)	1,476 ft. (450 m)
0.900	206 ft. (63 m)	521 ft. (159 m)	829 ft. (253 m)	1,312 ft. (400 m)
1.000 (max.)	185 ft. (56 m)	469 ft. (143 m)	746 ft. (227 m)	1,181 ft. (360 m)

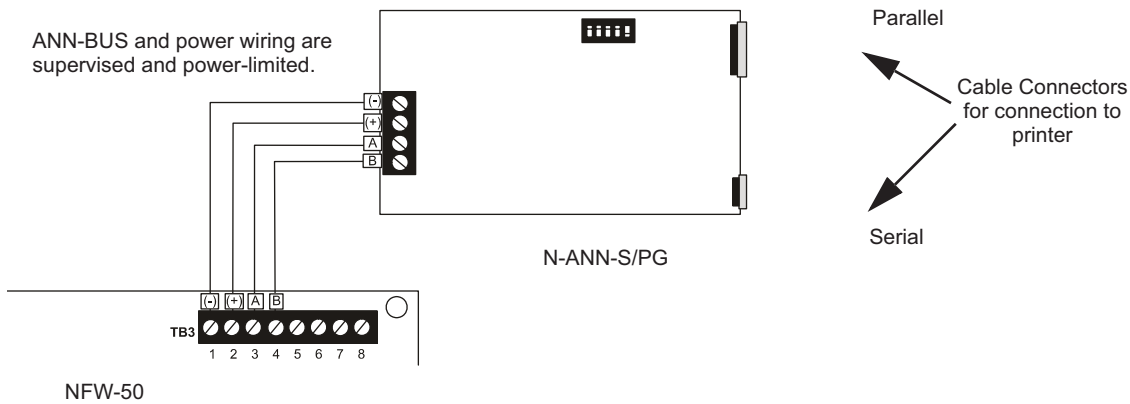

N-ANN-S/PG Connection to FACP

NOTE: Sample shows NFW-50; refer to your panel's FACP Manual for actual connections.

NOTIFIER® is a registered trademark of Honeywell International Inc.
 ©2007 by Honeywell International Inc. All rights reserved. Unauthorized use of this document is strictly prohibited.



This document is not intended to be used for installation purposes.
 We try to keep our product information up-to-date and accurate.
 We cannot cover all specific applications or anticipate all requirements.
 All specifications are subject to change without notice.



For more information, contact Notifier. Phone: (203) 484-7161, FAX: (203) 484-7118.
www.notifier.com